


# LABEL REWINDER GLR-100

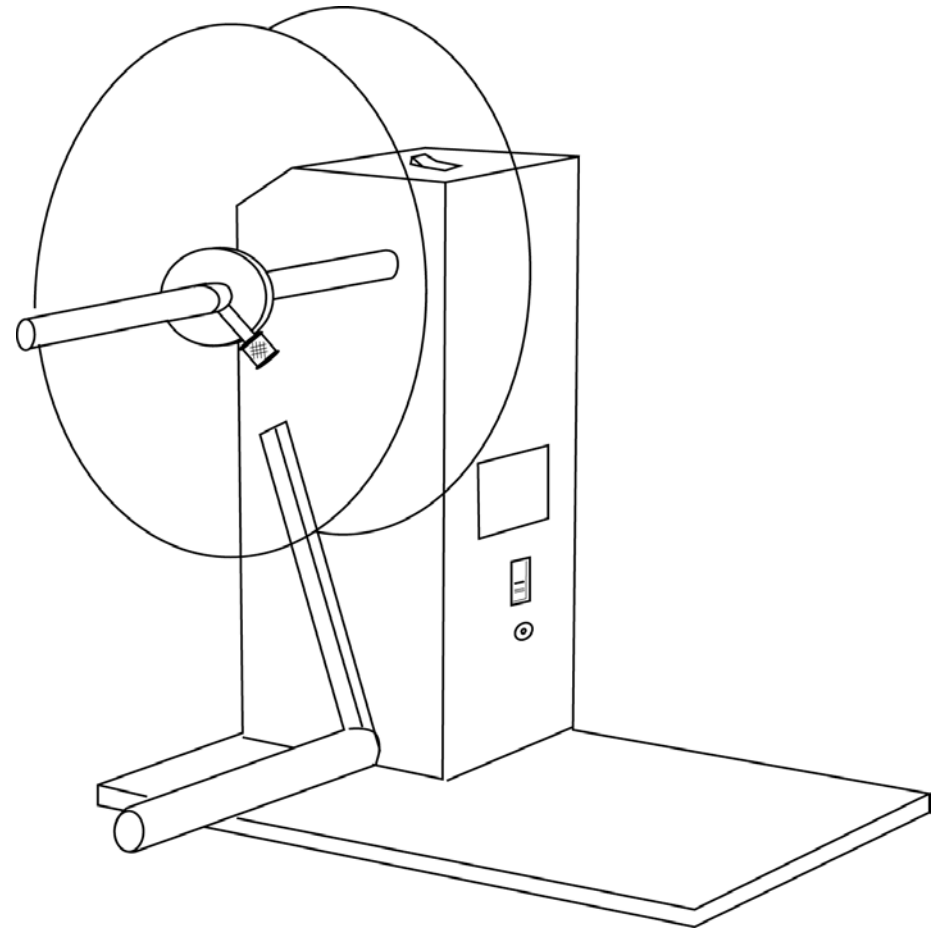


OWNER'S MANUAL

# LABEL REWINDER GLR-100

## GETTING POWER

Connect the Power Cable to the rewinder Power Inlet and turn the power switch on.

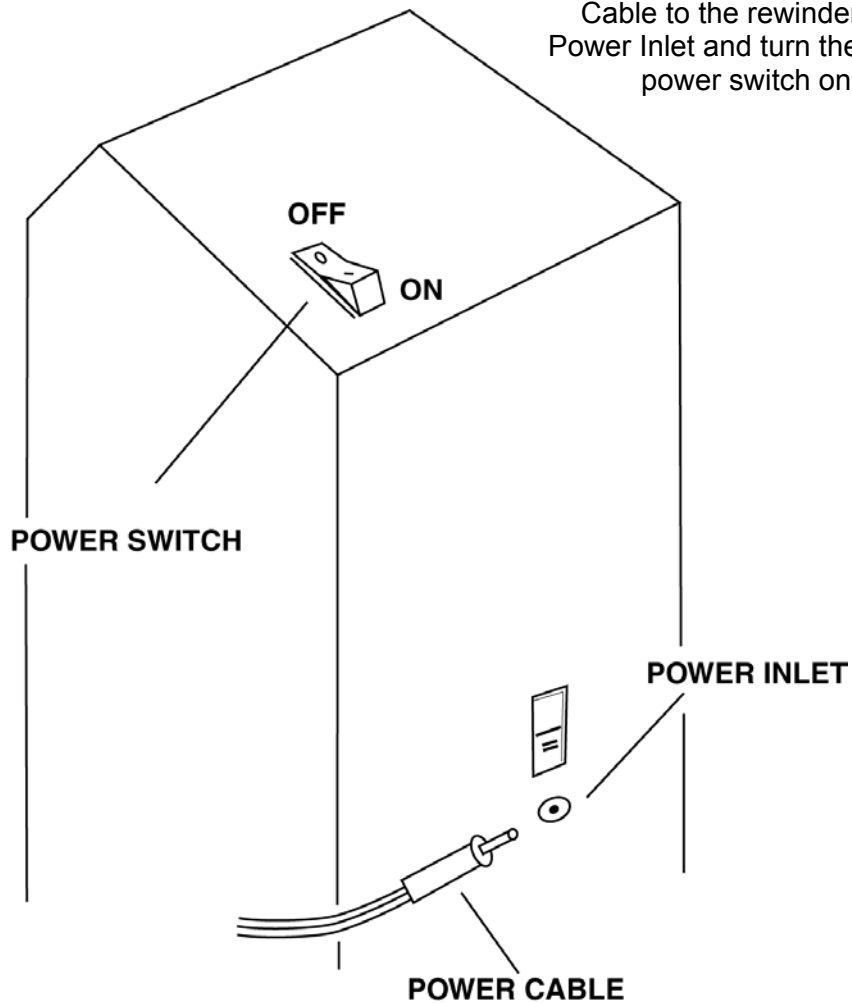

POWER SWITCH

OFF  
ON


POWER INLET

POWER CABLE

5

# LABEL REWINDER GLR-100

## LAYOUT

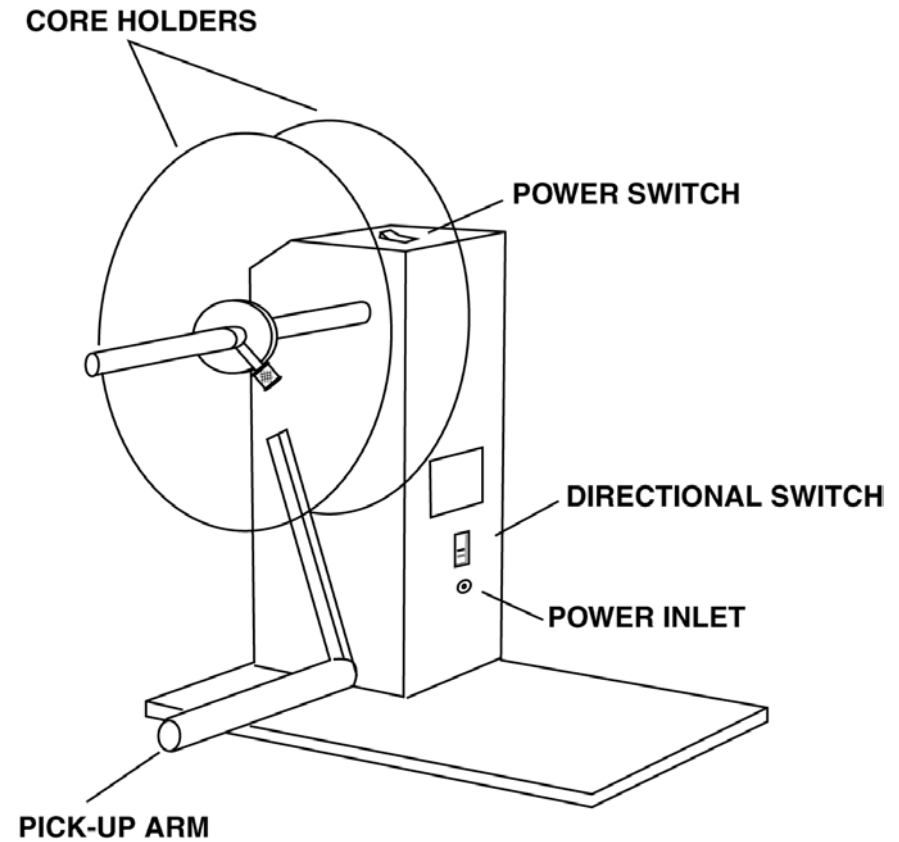

CORE HOLDERS

POWER SWITCH

DIRECTIONAL SWITCH

POWER INLET

PICK-UP ARM


**CAUTION: DO NOT LIFT OR CARRY THE  
UNIT USING THE PICK UP ARM.**

2

# LABEL REWINDER GLR-100


## SET-UP & ASSEMBLY GUIDE

The base has 4 screw holes that allow the tower to be attached.  
Line up the holes in the base with the holes in the tower and  
fasten together.

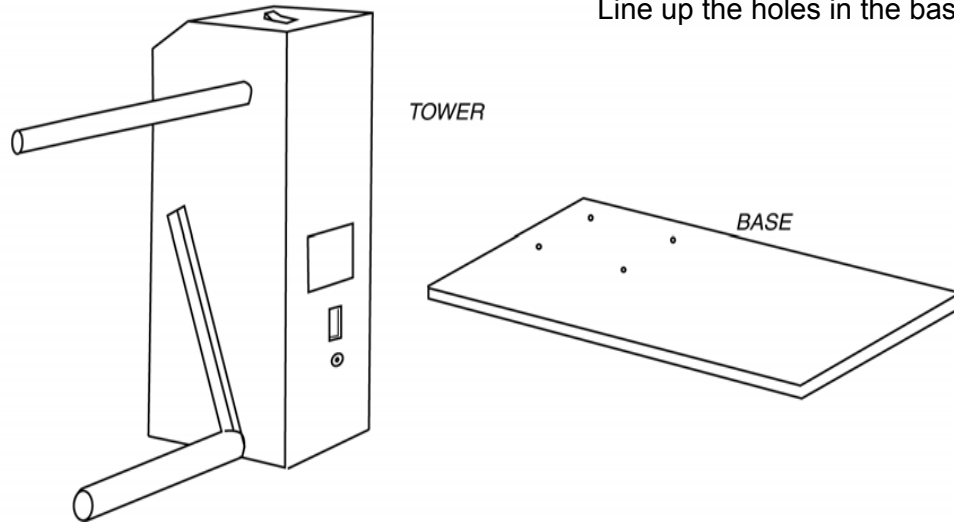


### EASY SET-UP

- 1.) Slide disk onto shaft (bladed).
- 2.) Select the diameter of Core Holder to match your empty cores. Slide Core Holder onto shaft. Ensure that it is threaded securely onto shaft.
- 3.) Slide empty core onto shaft.
- 4.) Secure the outer disk with matching core holder & slide onto shaft.
- 5.) Tighten the thumbscrew on the outer disk.

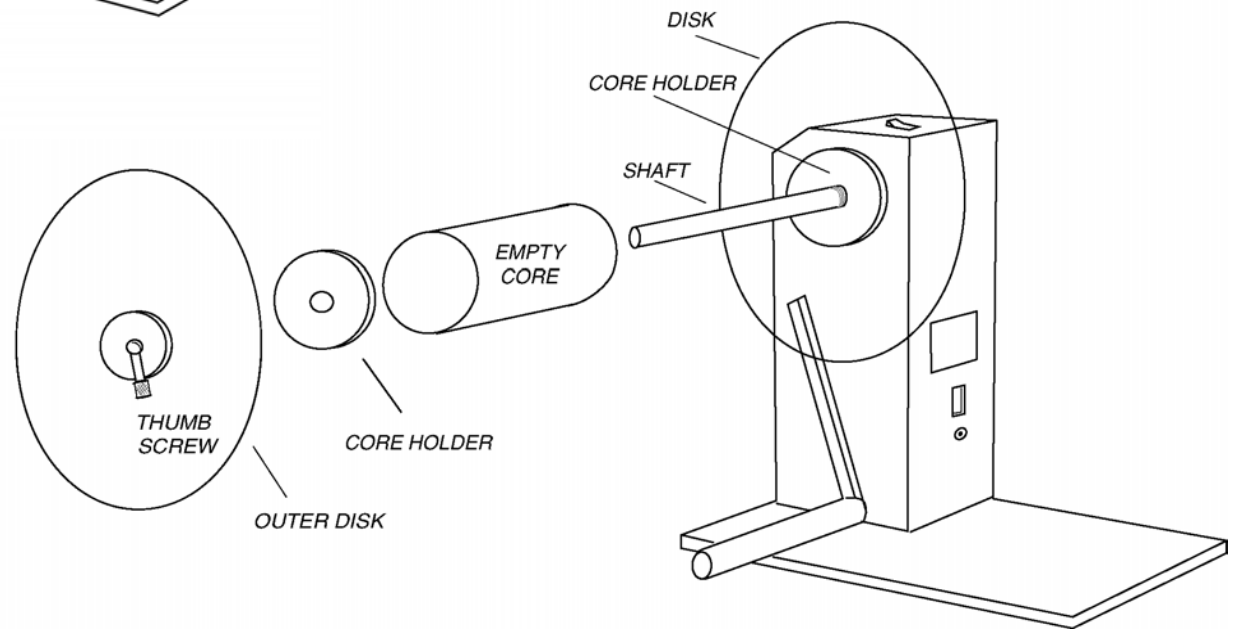

# LABEL REWINDER GLR-100

## DIMENSIONS

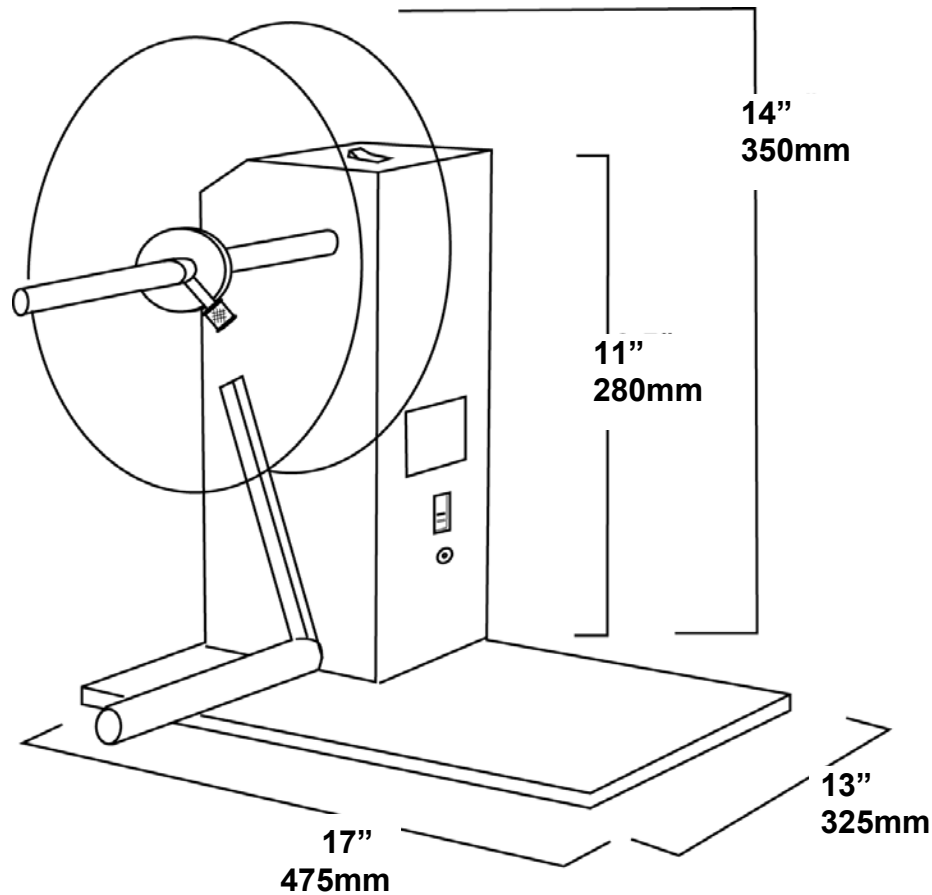

1

# LABEL REWINDER GLR-100


## LABEL THREADING

The rewriter has a winding Direction Switch (directly above the power inlet) that allows you to select the mode of rewinding: labels wound in or labels wound out.

### 1. Outside Winding




Directional Switch  
in lower position.

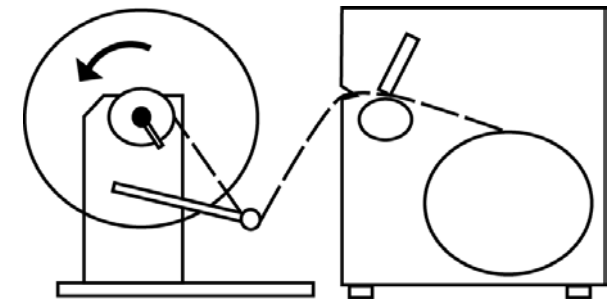

### 2. Inside Winding



Directional Switch  
in upper position.

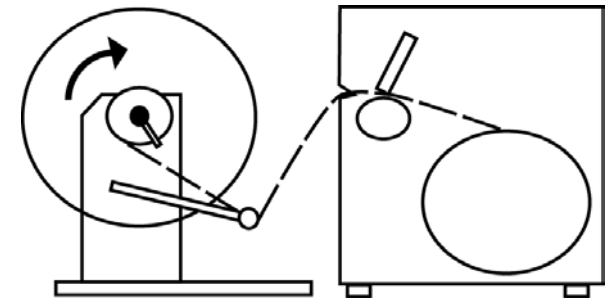

6