


LABEL UNWINDER GLU-100

GLU-100 UNWINDER INSTRUCTIONS

- Place the unwinder at the rear of the printer.
- Feed the labels under the pick up arm and through the printer.
- As the printer begins to print, the pick up arm will rise and the roll will begin to turn.

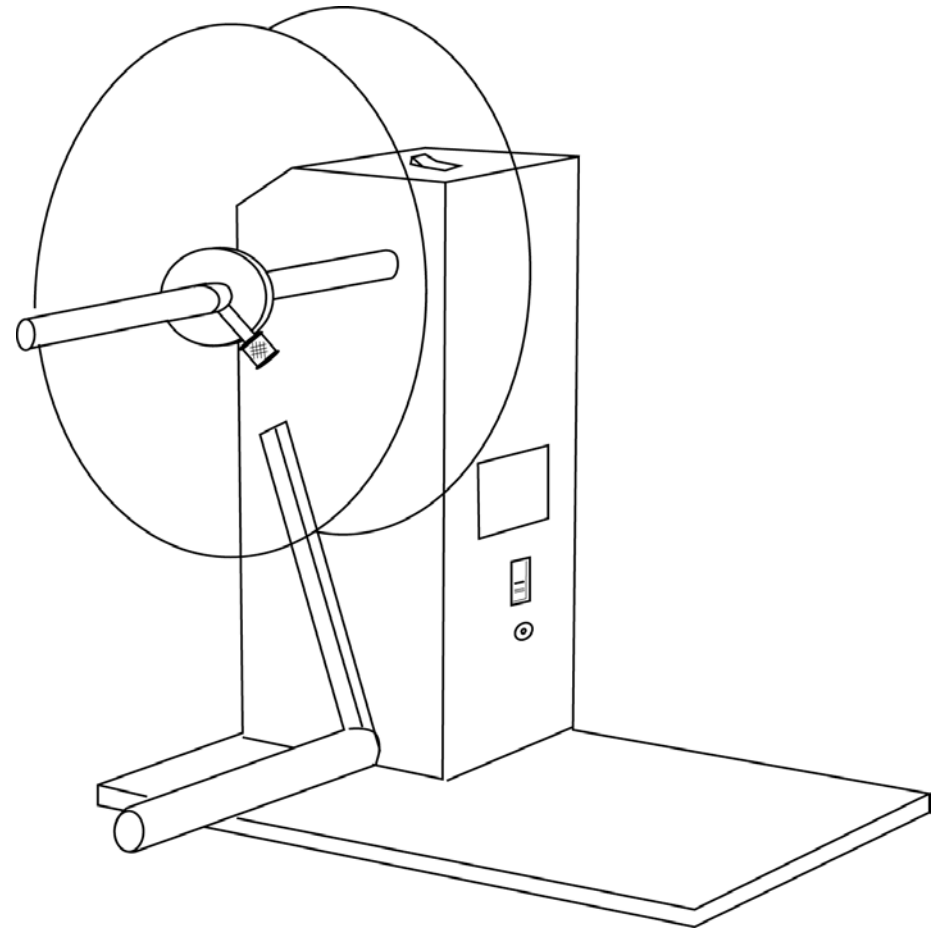


OWNER'S MANUAL

LABEL UNWINDER GLU-100

GETTING POWER


Connect the Power Cable to the unwinder Power Inlet and turn the power switch on.

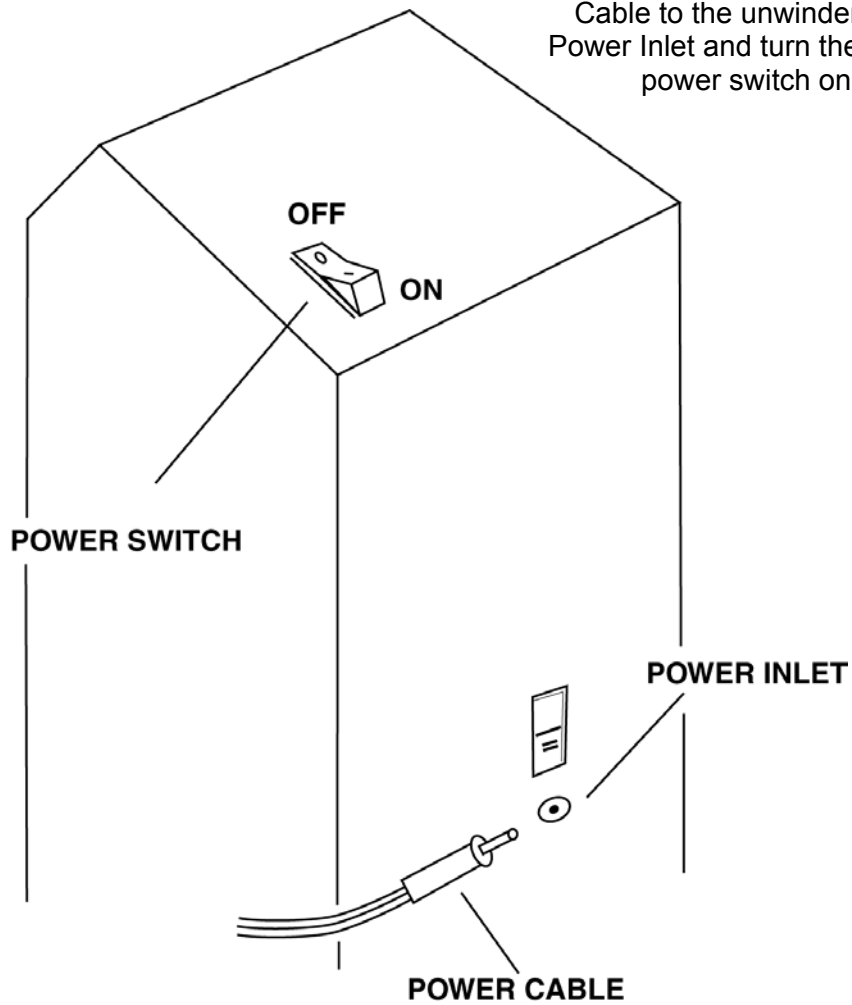

5

LABEL UNWINDER GLU-100

LAYOUT

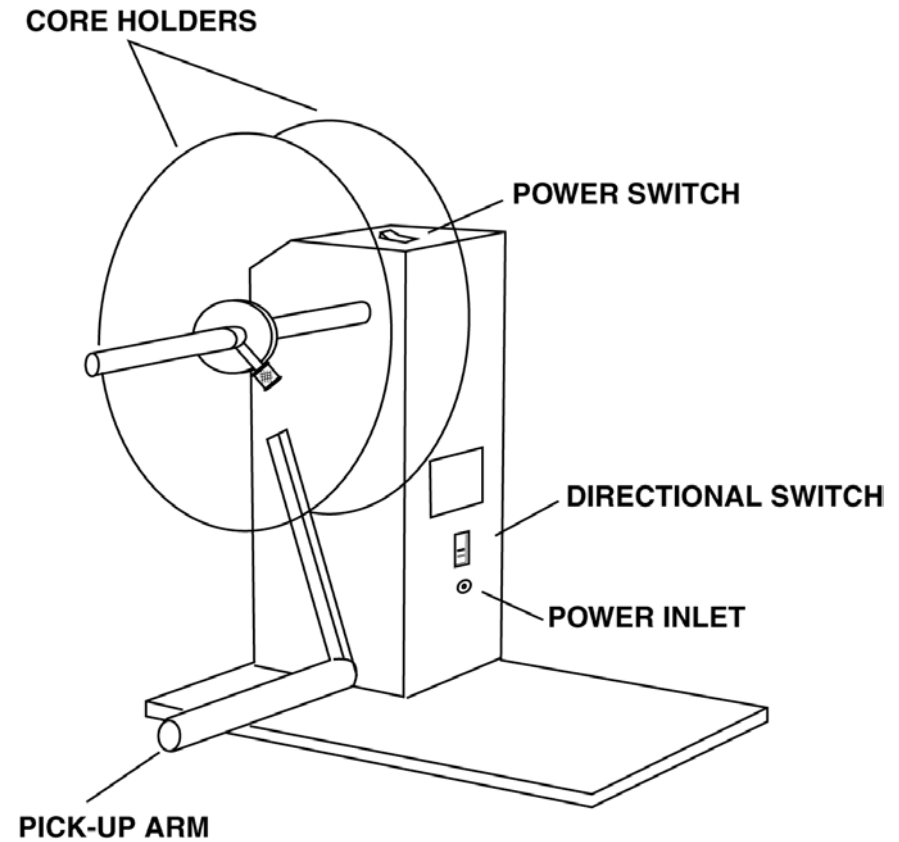


CAUTION: DO NOT LIFT OR CARRY THE UNIT USING THE PICK UP ARM.

2

LABEL UNWINDER GLU-100


SET-UP & ASSEMBLY GUIDE

The base has 4 screw holes that allow the tower to be attached.
Line up the holes in the base with the holes in the tower and
fasten together.

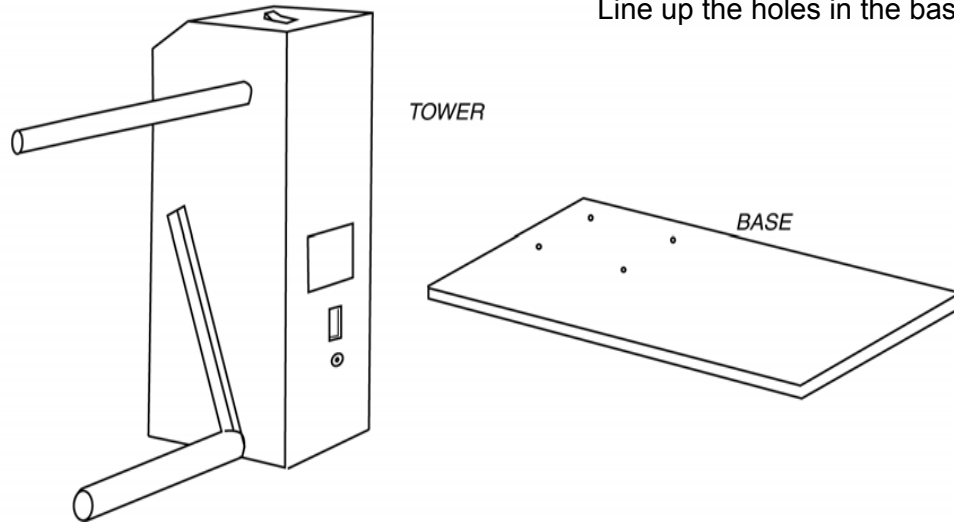


EASY SET-UP

- 1.) Slide disk onto shaft (bladed).
- 2.) Select the diameter of Core Holder to match your empty cores. Slide Core Holder onto shaft. Ensure that it is threaded securely onto shaft.
- 3.) Slide empty core onto shaft.
- 4.) Secure the outer disk with matching core holder & slide onto shaft.
- 5.) Tighten the thumbscrew on the outer disk.

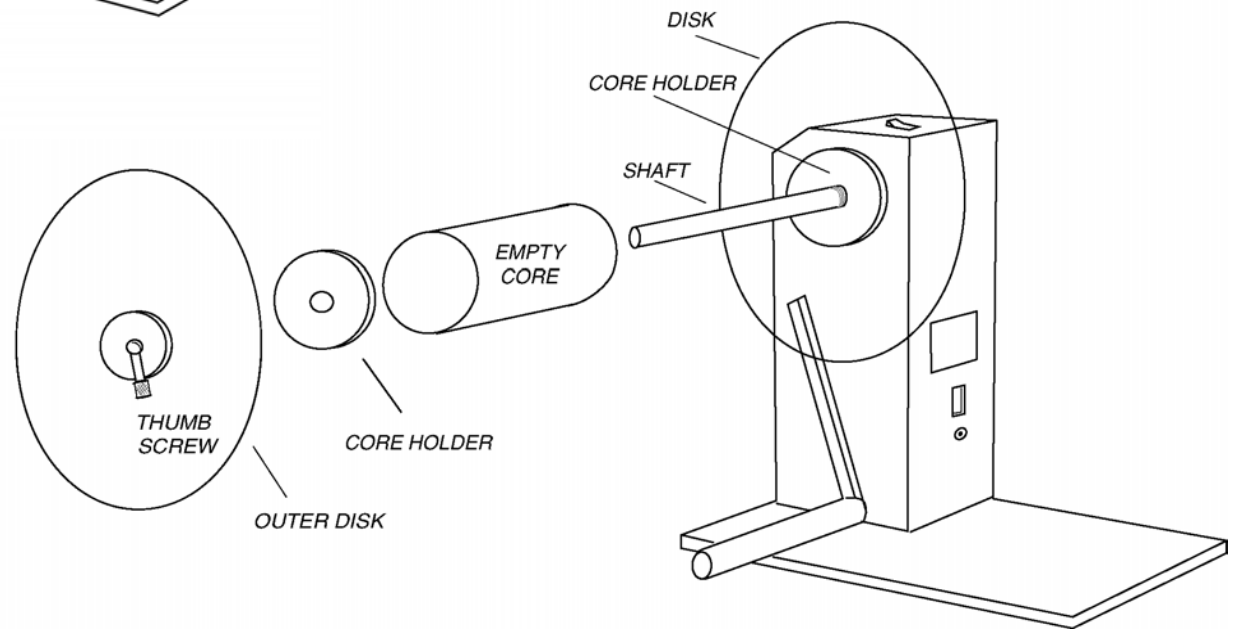

LABEL UNWINDER GLU-100

DIMENSIONS

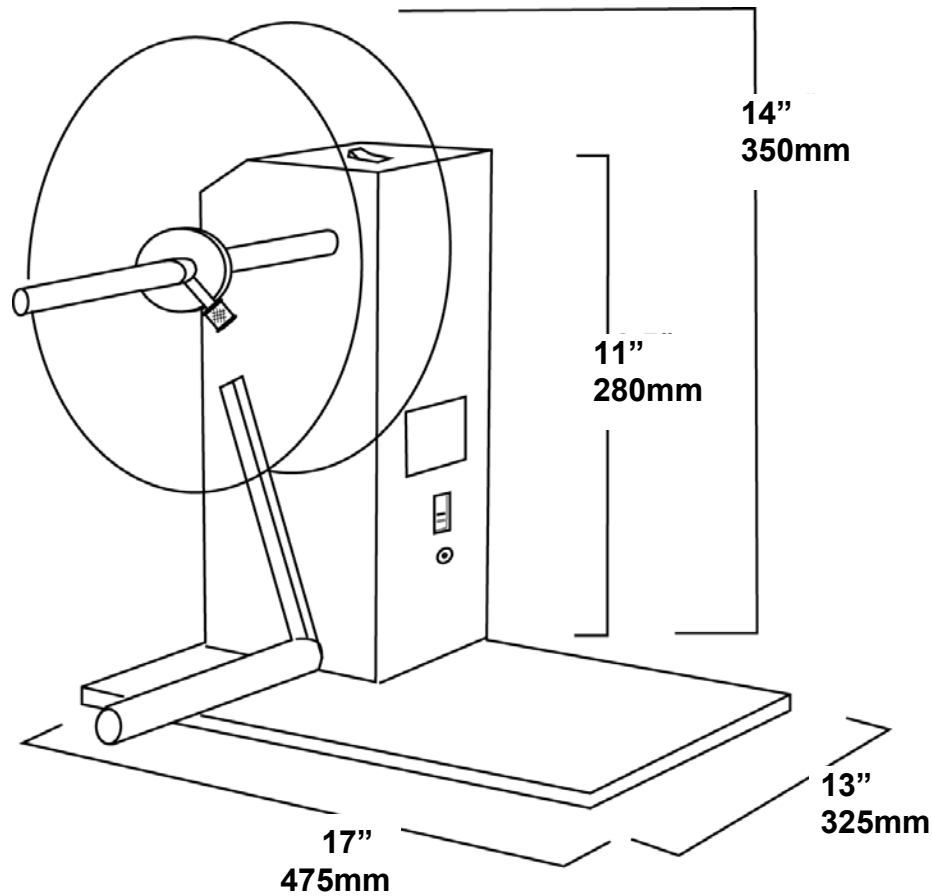

LABEL UNWINDER GLU-100


LABEL THREADING

The unwinder has an unwinding Direction Switch (directly above the power inlet) that allows you to select the mode of unwinding: labels wound in or labels wound out.

1. Outside Unwinding



Directional Switch
in lower position.

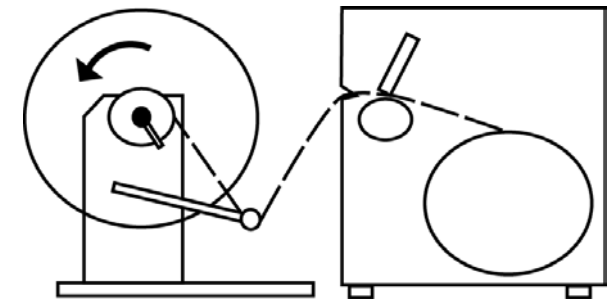

2. Inside Unwinding



Directional Switch
in upper position.

